



COMPLIANCE TESTED by berkeley analytical

VOC Emission Test Certificate

Product Name: ZRC Zero VOC - 40003

Product Sample Information

Company:

Company Website:

Product Type:

Paints & Coatings. See attached Customer letter describing loading in modeling scenarios

Date Produced:

11/6/2019

Certificate Information

Certificate No:

191127-05

Certified By:

Raja S. Tannous, Laboratory Director

Date:

November 27, 2019

Reference Standard: California Department of Public Health CDPH/EHLB/Standard Method Version 1.2, 2017
(Emission testing method for CA Specification 01350)

Acceptance Criteria and Results Demonstrating Compliance of Product Sample to Referenced Standard:

Exposure Scenario ¹	Individual VOCs of Concern ²		Formaldehyde ³		TVOC ⁴
	Criterion	Compliant?	Criterion	Compliant?	Range
School Classroom	≤½ Chronic REL	YES	≤9.0 µg/m ³	YES	≤ 0.5 mg/m ³
Private Office	≤½ Chronic REL	YES	≤9.0 µg/m ³	YES	≤ 0.5 mg/m ³

Product Coverage⁵: 378 g/m²

1. Exposure scenarios & product quantities for classroom & office are defined in Tables 4-2 – 4-5 (CDPH Std. Mtd. V1.2-2017)
2. Maximum allowable concentrations of individual target VOCs are specified in Table 4-1 (*ibid.*)
3. Maximum allowable formaldehyde concentration is ≤9 µg/m³, effective Jan 1, 2012; previous limit was ≤16.5 µg/m³ (*ibid.*)
4. Informative only; predicted TVOC Range in three categories, i.e., ≤0.5 mg/m³, >0.5 – 4.9 mg/m³, and ≥5.0 mg/m³
5. Informative and applicable only to tests of wet-applied products; grams of sample applied per square meter of substrate

Standards & Codes Recognizing CDPH Standard Method V1.2 (partial list)

- USGBC LEED Version 4, BD&C, ID&C
- The WELL Building Standard
- ANSI/GBI 01, Green Building Assessment Protocol
- ANSI/ASHRAE/USGBC/IES Standard 189.1

Narrative: Southwest Steel selected a sample representative of its ZRC Zero VOC - 40003 product and submitted it on 11/7/2019 for testing. Berkeley Analytical measured and evaluated the emissions of VOCs from this sample following CDPH/EHLB/Standard Method V1.2-2017. The results of the test are presented in Berkeley Analytical report, 1243-001-01A-Nov2719.

Berkeley Analytical is an independent, third-party laboratory specializing in the analysis of organic chemicals emitted by and contained in building products, finishes, furniture, and consumer products. We are an ISO/IEC 17025 accredited laboratory (IAS, [TL-383](#)); all standards used in performing this test are in Berkeley Analytical's scope of accreditation.

DISCLAIMER: THIS CERTIFICATE OF COMPLIANCE AFFIRMS THAT: 1) A SAMPLE OF THE LISTED PRODUCT WAS TESTED ACCORDING TO THE REFERENCED STANDARD; 2) THE MEASURED VOC EMISSIONS FROM THE SAMPLE WERE EVALUATED FOR THE DEFINED EXPOSURE SCENARIO(S); AND 3) THE RESULTS MEET THE ACCEPTANCE CRITERIA OF THE REFERENCED STANDARD(S). BERKELEY ANALYTICAL IS NOT RESPONSIBLE FOR ANY CLAIMS REGARDING A PRODUCT OR PRODUCTS ENTERED INTO COMMERCE THAT MAY BE BASED ON THIS TEST. BERKELEY ANALYTICAL PROVIDES THIS CERTIFICATE OF COMPLIANCE "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PURPOSE.


©2019 Berkeley Analytical, 815 Harbour Way South, Suite 6, Richmond, CA 94804 / 510-236-2325 / www.berkeleyanalytical.com

FC17B.2

BERKELEY ANALYTICAL

815 Harbour Way South, Suite 6
Richmond, CA 94804-3614
Ph. 510-236-2325; Fax 510-236-2335
E-mail info@berkeleyanalytical.com

VOC Emissions from Building Products**Customer & Building Product Sample Information**

Report Certification	
Report number	1243-001-01A-Nov2719
Report date	November 27, 2019
Certified by (Name/Title)	Alfred T. Hodgson, Research Director
Signature	
Date	November 27, 2019

Standards	
Test method	CDPH/EHLB/Standard Method V1.2 (Sect. 01350)
Acceptance criteria	CDPH/EHLB/Standard Method V1.2
Modeling scenario(s)	CDPH/EHLB/Standard Method V1.2 Standard Classroom & Office
Product type	Paints & Coatings

Customer Information	
Manufacturer or organization	
City/State/Country	
Contact name/Title	
Phone number/E-mail	

Product Sample Information*	
Manufacturer (if not customer)	ZRC Worldwide, Marshfield, MA, USA
Product name / Number	ZRC Zero VOC / 40003
Product CSI category	Painting and Coating (09 90 00)
Customer sample ID	Not provided
Manufacturing location	Field Application/Google Charleston
Date sample manufactured	Nov 6, 2019
Date sample collected	Nov 6, 2019
Date sample shipped	Nov 7, 2019
Date sample received by lab	Nov 7, 2019
Condition of received sample	No observed problems
Lab sample tracking number	1243-001-01A
Conditioning start date & duration	Nov 8, 2019; 10 days
Chamber test start date & duration	Nov 18, 2019; 4 days (96 hours)
Total test start date & duration	Nov 8, 2019; 14 days (336 hours)

*Chain-of-custody (COC) form for product sample is attached to this report

Conformity Assessment – CDPH VOC Concentration Criteria

VOC Emission Test Results – The product sample was tested for emissions of VOCs following California Department of Public Health CDPH/EHLB/Standard Method Version 1.2, 2017. The chamber test results were modeled to one or more scenario(s) defined in CDPH Standard Method V1.2. The modeled indoor VOC concentrations then were compared to the acceptance criteria defined in CDPH Standard Method V1.2 to determine compliance of the product sample to the standard. The modeling scenario(s) are detailed in Table 3, and the predicted indoor VOC concentrations at 336 hours are given in Table 6 of this report. The allowable concentrations used as acceptance criteria are reproduced in Appendix B of this report. Table 1 summarizes the pass/fail results based on the predicted indoor air concentrations of individual VOCs of concern in the modeled scenario(s).

TVOC Concentration Range – USGBC's LEED v4 rating systems for buildings include a requirement for reporting of the predicted TVOC concentration in one of three range categories, i.e., $\leq 0.5 \text{ mg/m}^3$, >0.5 to 4.9 mg/m^3 , and $\geq 5.0 \text{ mg/m}^3$. Table 1 includes the TVOC concentration range in the modeled scenario(s).

Table 1. Pass/Fail results based on the test method and identified modeling scenarios. Only detected individual VOCs with defined acceptance criteria are listed. The TVOC concentration range also is shown

Chemical	CAS No	Allowable Concentration ($\mu\text{g}/\text{m}^3$)	Predicted Concentration (Pass/Fail)	
			Classroom	Office
No formaldehyde or other target CREL VOCs were detected	--	--	Pass	Pass
TVOC ^a	--	--	$\leq 0.5 \text{ mg}/\text{m}^3$	$\leq 0.5 \text{ mg}/\text{m}^3$

^a Reporting of TVOC range is for information only; TVOC is not a Pass/Fail criterion

Test Method for Building Product Samples

Test Specimen Preparation – Customer prepared a painted metal sample on a stainless-steel plate and submitted it to the laboratory. Immediately prior to the test, we sealed all edges with aluminum tape and placed the specimen into the conditioning chamber. The exposed area is based on the top surface of 17.7 cm by 17.7 cm. Photographs of the tested specimen are shown later in this report. The test results presented herein are specific to this item.

Test Protocol Summary* – This VOC emission test was performed following California Department of Public Health CDPH/EHLB/Standard Method Version 1.2, 2017. This version of the standard is identical to CDPH/EHLB/Standard Method V1.1, 2010 except that the benzene allowable concentration is lower. Note: this standard derives from California architectural Specification 01350 and frequently is referred to as “Section 01350.” The chamber test prescribed in the standard follows the guidance of ASTM Standard Guide D5116. Chemical sampling and analyses were performed following U.S. EPA Compendium Method TO-17 and ASTM Standard Method D5197. The product specimen was prepared from the supplied product sample and was placed directly into the conditioning environment and maintained at controlled conditions of air flow rate, temperature and relative humidity for ten days. At the end of this period, the specimen was transferred directly to a small-scale chamber. The chamber conditions for the 96-h test period are summarized in Table 2. Air samples were collected from the chamber at 24 h, 48 h and 96 h elapsed time. Samples for the analysis of individual VOCs and TVOC were collected on multisorbent tubes containing Tenax-TA backed by a carbonaceous sorbent. Samples for the analysis of low molecular weight aldehydes were collected on treated DNPH cartridges. VOC samples were analyzed by thermal desorption GC/MS. TVOC was calculated using toluene as the calibration reference. Individual VOCs (iVOCs) were quantified using multi-point (4 or more points) with calibration curves prepared with pure standards, unless otherwise noted. iVOCs without pure standards were quantified based on their total-ion-current responses using toluene as the calibration reference. Formaldehyde and acetaldehyde were analyzed by HPLC and quantified using multi-point (4 or more points) calibration curves. The analytical instruments and their operating parameters are described in Appendix A.

Availability of Data – All data, including but not limited to raw instrument files, calibration files, and quality control checks used to generate the test results will be made available to the customer upon request subject to Berkeley Analytical’s Services Agreement.

Table 2. Chamber conditions for test period

Parameter	Symbol	Units	Value
Tested specimen exposed area	A_s	m^2	0.0313
Chamber volume	V_c	m^3	0.067
Loading ratio	L	m^2/m^3	0.468
Avg. Inlet gas flow rate & Range	Q_c	m^3/h	0.067 (0.064-0.070)
Avg Temperature & Range		$^{\circ}C$	23.0 (22-24)
Avg Relative humidity & Range		%	50 (45-55)
Duration		h	96

*All standards identified in this section are included in Berkeley Analytical’s scope of ISO/IEC17025 accreditation, Testing Laboratory TL-383, International Accreditation Service, www.iasonline.org

Modeling Parameters for Building Products

Modeling Parameters – CDPH/EHLB/Standard Method Version 1.2 describes the modeling procedures and parameters for estimating the impact of VOC emissions from a building product on indoor air concentrations in a standard classroom and a standard office space. The dimensions and ventilation of the spaces and the exposed surface areas of major materials are prescribed. The modeling scenario(s) and parameters applicable to this test are listed in Table 3.

Table 3. Parameters used for estimating VOC air concentrations at 336 hours for the modeling scenarios

Parameter	Symbol	Units	Value	
			Classroom	Office
Product exposed area	A_{PB}	m^2	5.0*	5.0*
Building volume	V_B	m^3	231	30.6
Floor/Ceiling Area	A_B	m^2	89.2	11.15
Ceiling height	H_B	m	2.59	2.74
Outdoor air (OA) flow rate	Q_B	m^3/h	191	20.7
Area-specific air flow rate	q_A	m^3/m^2-h	38.2	4.14

*See attached letter from customer describing the use and probably worst-case loading of the product in the modeling scenarios

VOC Emission Test Results

Chamber Background Concentrations – Background concentrations measured at time zero are reported in Table 4. The background concentrations of TVOC, formaldehyde, acetaldehyde, and reported iVOCs are listed.

Table 4. Chamber background VOC concentrations at time zero

Chemical/Chemical Group	CAS No	Chamber Conc ($\mu\text{g}/\text{m}^3$)
Acetaldehyde	75-07-0	LQ
Formaldehyde	50-00-0	LQ
TVOC	--	LQ

Emitted VOCs – Individual VOCs (iVOCs) detected in the test and present above the lower limits of quantitation in chamber air are reported in Table 5. All iVOCs with CRELs and/or on other lists of toxicants of concern are listed first. Next, all frequently occurring iVOCs with pure standard calibrations are listed. Additionally, the 10 most abundant iVOCs quantified using toluene as the reference standard are listed; identifications of these compounds are considered tentative. Reporting of fewer than 10 iVOCs indicates that fewer than 10 chemicals met these criteria.

Table 5. Listed and abundant iVOCs detected above lower limits of quantitation in 96-h air sample

Chemical	CAS No	Surrogate?*	CREL ($\mu\text{g}/\text{m}^3$)	CARB TAC Category	Prop 65 List?
No formaldehyde or other iVOCs were detected in the test	--	--	--	--	--

*"Yes" response indicates iVOC quantified using toluene as the calibration reference; all other iVOCs quantified using pure standards

VOC Emission Test Results, Continued

VOC Emission Factors and Estimated Indoor Air Concentrations – The 96-h chamber sample was analyzed for iVOCs including formaldehyde and acetaldehyde. The emission factors for iVOCs presented in Table 6 were calculated from the chamber parameters, the exposed area of the test specimen and the measured 96-h chamber concentrations corrected for any chamber background concentrations. The emission factors were used to predict the indoor air concentrations of iVOCs for the modeling scenario(s) applicable to this test as shown in Table 3. See Equations for calculation methods.

Table 6. Measured chamber concentrations at 96 h, calculated emission factors, and estimated indoor air concentrations of individual VOCs for the modeling scenarios

Chemical	Chamber Concentration ($\mu\text{g}/\text{m}^3$)	Emission Factor ($\mu\text{g}/\text{m}^2\text{-h}$)	Estimated Indoor Air Concentration ($\mu\text{g}/\text{m}^3$)	
			Classroom	Office
No formaldehyde or other iVOCs were detected in the test	--	--	--	--

VOC Emission Test Results, Continued

Quality Measurements – Chamber samples collected at 24, 48 and 96 hours were analyzed for total VOCs (TVOC). Because the TVOC response per unit mass of a chemical is highly dependent upon the specific mixture of iVOCs, the measurement of TVOC is semi-quantitative. TVOC primarily is used as a quality measure to determine if the VOC emissions from a product are relatively constant or generally declining over the test period. Some programs may require the reporting of predicted indoor air TVOC concentrations or concentration ranges in mg/m^3 . TVOC emission factors and predicted TVOC concentrations are shown in Table 7. Aldehyde samples collected at 24, 48 and 96 hours were analyzed for formaldehyde as another quality measure. Formaldehyde emission factors are shown in Table 8. Product claims related to formaldehyde content may be based, in part, on formaldehyde emission factors.

Table 7. TVOC chamber concentrations at 24, 48, and 96 h with corresponding emission factors and predicted indoor air concentrations (mg/m^3)



Elapsed Time (h)	Chamber Concentration ($\mu\text{g}/\text{m}^3$)	Emission Factor ($\mu\text{g}/\text{m}^2\text{-h}$)	Estimated Indoor Air Concentration (mg/m^3)	
			Classroom	Office
24	LQ	LQ	LQ	LQ
48	LQ	LQ	LQ	LQ
96	LQ	LQ	LQ	LQ

Table 8. Formaldehyde chamber concentrations at 24, 48, and 96 h with corresponding emission factors

Elapsed Time (h)	Chamber Concentration ($\mu\text{g}/\text{m}^3$)	Emission Factor ($\mu\text{g}/\text{m}^2\text{-h}$)
24	LQ	LQ
48	LQ	LQ
96	LQ	LQ

Photographs of Tested Product Specimen

Photo Documentation – The product sample specimen is photographed immediately following specimen preparation and prior to initiating the conditioning period. Typically, the top and bottom faces of the specimen are photographed. Bottom faces may show a stainless steel plate or other substrate if prescribed by the standard.

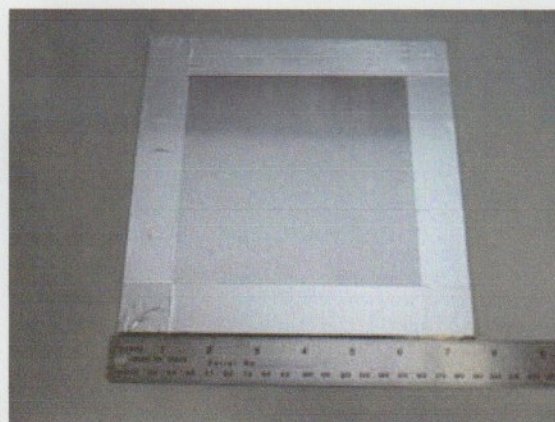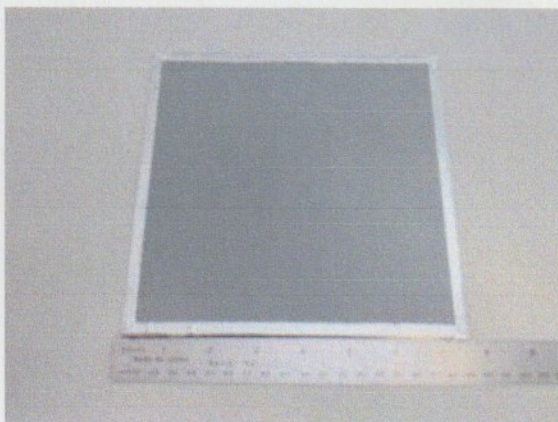

Definitions, Equations, and Comments

Table 9. Definitions of parameters

Parameter/Value	Definition
CARB TAC	Toxic Air Contaminant (TAC) on California Air Resources Board list, with toxic category indicated
CAS No.	Chemical Abstract Service registry number providing unique chemical ID
Chamber Conc.	Measured chamber VOC concentration at time point minus any analytical blank or background concentration for empty chamber measured prior to test. Lower limit of quantitation (LQ) or reporting limit for individual VOCs is 2 µg/m ³ unless otherwise noted
Indoor Air Conc.	Estimated indoor air concentration in standard modeled environment calculated from the emission factors from test results and the modeling parameters in Table 3 using the equations given below
CREL	Chronic non-cancer Reference Exposure Level established by Cal/EPA OEHHA (http://www.OEHHA.ca.gov/air/allrels.html)
Emission Factor	Mass of compound emitted per unit area per hour (calculation shown below). Reporting limits for emission factors are established by LQ or reporting limit for chamber concentration and specimen area tested
Formaldehyde & acetaldehyde	Volatile aldehydes quantified by HPLC following ASTM Standard Method D5197. LQs for formaldehyde and acetaldehyde are 1.3 µg/m ³ and 1.7 µg/m ³ , respectively
Individual VOCs	Quantified by thermal desorption GC/MS following EPA Method TO-17. Compounds quantified using multi-point calibrations prepared with pure chemicals unless otherwise indicated. VOCs with chronic RELs are listed first, followed by other TAC and Prop. 65 compounds. Additional abundant VOCs at or above reporting limit of 2 µg/m ³ are listed last
LQ	Indicates calculated value is below its lower limit of quantitation
Prop 65 list	"Yes" indicates the compound is a chemical known to cause cancer or reproductive toxicity according to California Safe Drinking Water Toxic Enforcement Act of 1986 (Proposition 65)
TVOC	Total Volatile Organic Compounds eluting over retention time range bounded by n-pentane and n-heptadecane and quantified by GC/MS TIC method using toluene as calibration reference. LQ for TVOC is 20 µg/m ³
"na"	Not applicable
"<"	Less than value established by LQ

Equations Used in Calculations – An emission factor (EF) in µg/m²-h for a chemical in a chamber test of a building product sample is calculated using Equation 1:

$$EF = (Q_c (C - C_o)) / A_s \quad (1)$$

where Q_c is the chamber inlet air flow rate (m³/h), C is the VOC chamber concentration (µg/m³), C_o is the corresponding chamber background VOC concentration (µg/m³), and A_s is the tested specimen exposed area (m²).

Definitions, Equations, and Comments, Continued

The indoor air concentration (C_B) for the modeled space in $\mu\text{g}/\text{m}^3$ is estimated using Equation 2 and the parameters defined in Table 3:

$$C_B = (EF \times A_{p_B}) / Q_B \quad (2)$$

where A_{p_B} is the exposed area of the product in the building (m^2) and Q_B is the outside air flow rate (m^3/h).

Comments: This is a specialty coating. The attached letter from the Customer describes the use and probably worst-case loading of the product in the modeling scenarios.

END OF REPORT

BERKELEY ANALYTICAL
815 Harbour Way South, Suite 6
Richmond, CA 94804-3614

Appendix A
Analytical Instruments & Operating Parameters

Table A1. Description of analytical instrument components

Component	Description
HPLC	1260 Infinity Quaternary LC, G1314F VW Detector, Agilent
Analytical column	Poroshell 120 EC-C18, Agilent
Column dimensions	2.1 mm x 100 mm
Thermal desorber	Unity / TD100, Markes International, Ltd.
Gas chromatograph	Model 7890A, Agilent
Analytical column	DB-624, J&W Scientific
Column dimensions	1 µm film, 0.18 mm ID, 20 m
Mass spectrometer	Model 5975C MSD, Agilent

Table A2. HPLC operating parameters for analysis of formaldehyde and acetaldehyde

Parameter	Value
Solvent A	65/35% H ₂ O/Acetonitrile
Solvent B	100% Acetonitrile
Flow rate	0.3 mL/min
End time	11 min
Detector wavelength	360 nm

Table A3. Thermal desorption GC/MS parameters used for analysis of iVOCs and TVOC

Parameter	Value
Thermal desorption	
Tube desorb temperature	300 °C
Trap temperature	-5 °C
Trap desorb temperature	300 °C
Trap desorb split ratio	10:1
Gas chromatograph	
Initial temperature	40 °C
Initial temperature time	6.0 min
Final temperature	300 °C
Final temperature time	2 min
Mass spectrometer	
Low scan mass, <i>m/z</i>	30 amu
High scan mass, <i>m/z</i>	450 amu
Scan rate	3.42 Hz

BERKELEY ANALYTICAL
 815 Harbour Way South, Suite 6
 Richmond, CA 94804-3614
Appendix B
Target CREL VOCs and Their Maximum Allowable Concentrations
Copied from CDPH/EHLB/Standard Method Version 1.2, 2017, Table 4-1

No.	Compound Name	CAS No.	Allowable Conc. ($\mu\text{g}/\text{m}^3$)
1	Acetaldehyde	75-07-0	70
2	Benzene	71-43-2	1.5
3	Carbon disulfide	75-15-0	400
4	Carbon tetrachloride	56-23-5	20
5	Chlorobenzene	108-90-7	500
6	Chloroform	67-66-3	150
7	Dichlorobenzene (1,4-)	106-46-7	400
8	Dichloroethylene (1,1)	75-35-4	35
9	Dimethylformamide (N,N-)	68-12-2	40
10	Dioxane (1,4-)	123-91-1	1,500
11	Epichlorohydrin	106-89-8	1.5
12	Ethylbenzene	100-41-4	1,000
13	Ethylene glycol	107-21-1	200
14	Ethylene glycol monoethyl ether	110-80-5	35
15	Ethylene glycol monoethyl ether acetate	111-15-9	150
16	Ethylene glycol monomethyl ether	109-86-4	30
17	Ethylene glycol monomethyl ether acetate	110-49-6	45
18	Formaldehyde	50-00-0	9*
19	Hexane (n-)	110-54-3	3,500
20	Isophorone	78-59-1	1,000
21	Isopropanol	67-63-0	3,500
22	Methyl chloroform	71-55-6	500
23	Methylene chloride	75-09-2	200
24	Methyl t-butyl ether	1634-04-4	4,000
25	Naphthalene	91-20-3	4.5
26	Phenol	108-95-2	100
27	Propylene glycol monomethyl ether	107-98-2	3,500
28	Styrene	100-42-5	450
29	Tetrachloroethylene	127-18-4	17.5
30	Toluene	108-88-3	150
31	Trichloroethylene	79-01-6	300
32	Vinyl acetate	108-05-4	100
33-35	Xylenes, technical mixture (m-, o-, and p- xylene combined)	108-38-3, 95-47-6, 106-42-3	350

*All maximum allowable concentrations are one half the corresponding CREL adopted by Cal/EPA OEHHA with the exception of formaldehyde for which the full CREL of $9 \mu\text{g}/\text{m}^3$ is allowed.